crypto

ReDi 215A
HD DVB-T MPEG4 Receiver

Quick User Guide

SAFETY INFORMATION

This sheet lists important safety information that will help to assure proper use of the product. Please read them carefully before operation of your product.

TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

1. To prevent electric shock do not attempt opening or removing the covers of the device. The device uses AC220~240V and you may be expose to dangerous voltage.

2. To clean the device always unplug the product from the wall outlet. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

3. You will notice that the product has slots and openings. These are used for ventilation to ensure reliable operation and to protect it from overheating. The openings should never be blocked by other devices. This product should not be placed in an installation, unless proper ventilation is provided. Do not put anything above the product because you will block the ventilation openings causing the device to overheat.

4.The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Service

Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Korinthou 11, 14451 Metamorfosi, Tel: 210-8098700, Fax: 210-6122512
Site: www.crypto.gr, Email: crypto@crypto.gr

INTRODUCTION

About ReDi 215A

Front panel

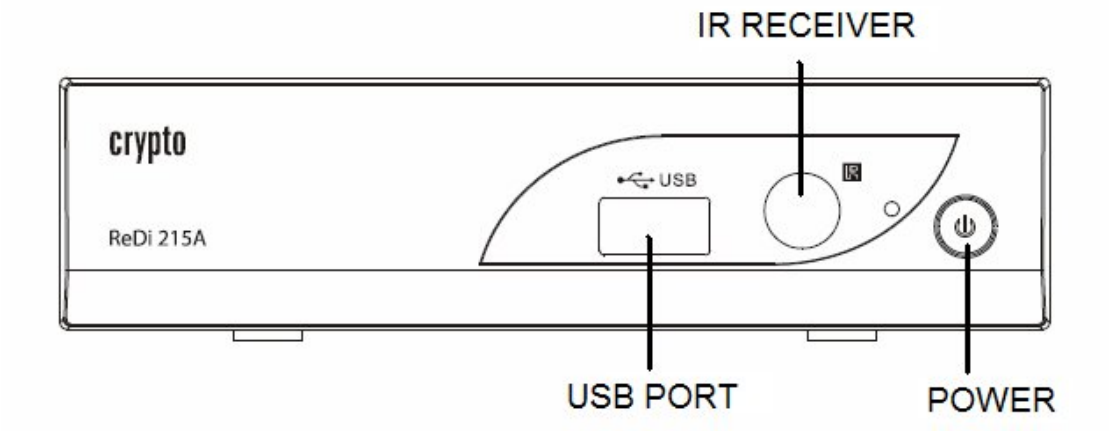

Rear panel

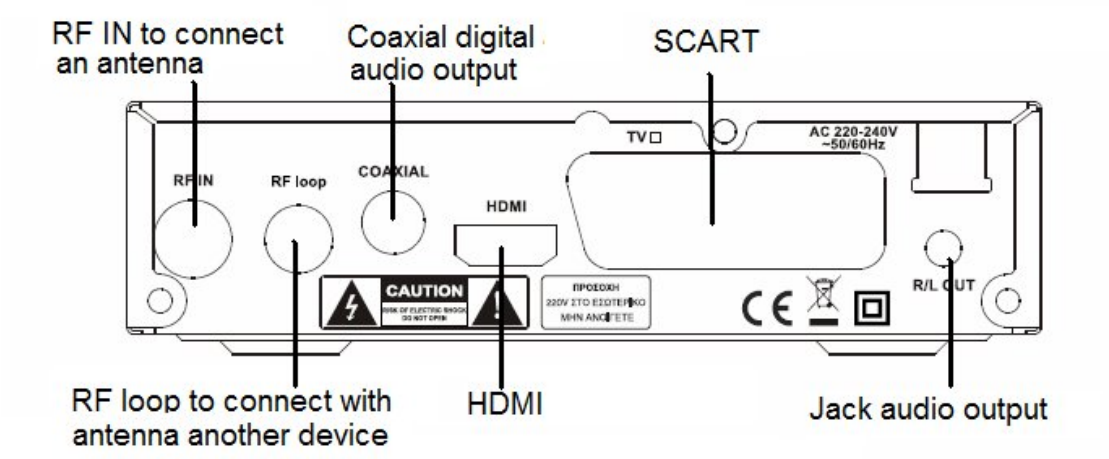

Korinthou 11, 14451 Metamorfosi, Tel: 210-8098700, Fax: 210-6122512
Site: www.crypto.gr, Email: crypto@crypto.gr

Remote control

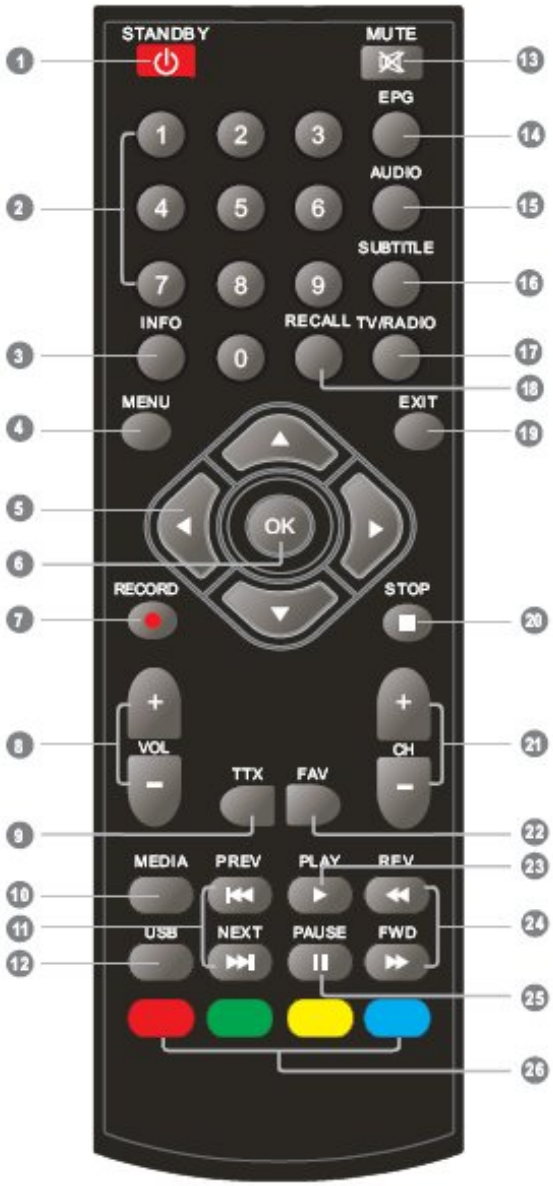

1. STANDBY (Switch the STB on and standby)
2. Numeric entry (Enter numeric values and select the channel directly by entering it's number)
3. INFO (Press for current channel information)
4. Menu (Open and close the menu screen)
5. Cursor: Navigation buttons used to navigatemenus items
6. OK button (Confirm a selection within a menu)
7. RECORD (Record the TV program)
8. VOL+,- (VOL+/-:Volume Up and Down)
9. TTX (Open interactive service)
10. MEDIA (Enter Record menu)
11. Previous/Next

Korinthou 11, 14451 Metamorfosi, Tel: 210-8098700, Fax: 210-6122512
Site: www.crypto.gr, Email: crypto@crypto.gr

12. USB (Enter Music menu)
13. MUTE (Turn off/on the volume)
14. EPG (Open up Electronic Program Guide Menu)
15. AUDIO (Select audio mode and audio track)
16. SUBTITLE (On/Off Subtitle)
17. TV/RADIO (Switch between TV and Radio)
18. Recall (playback the previous programe)
19. EXIT (Exit from menu)
20. STOP (Stop program playback or recording)
21. CH+/- (Channel Up and Down)
22. FAV (Open the Favorite list)
23. PLAY
24. Search backward /forward
25. PAUSE(Pause/Active timeshift function)
26. RED/GREEN/YELLOW/BLUE Buttons (For interactive function/Submenu function buttons)

Korinthou 11, 14451 Metamorfosi, Tel: 210-8098700, Fax: 210-6122512
Site: www.crypto.gr, Email: crypto@crypto.gr

SYSTEM & TV CONNECTION

General

There are many different types of TV and other equipment that you can connect to the device. In this manual you will see some of the most common ways to connect your equipment.

Connection to the TV

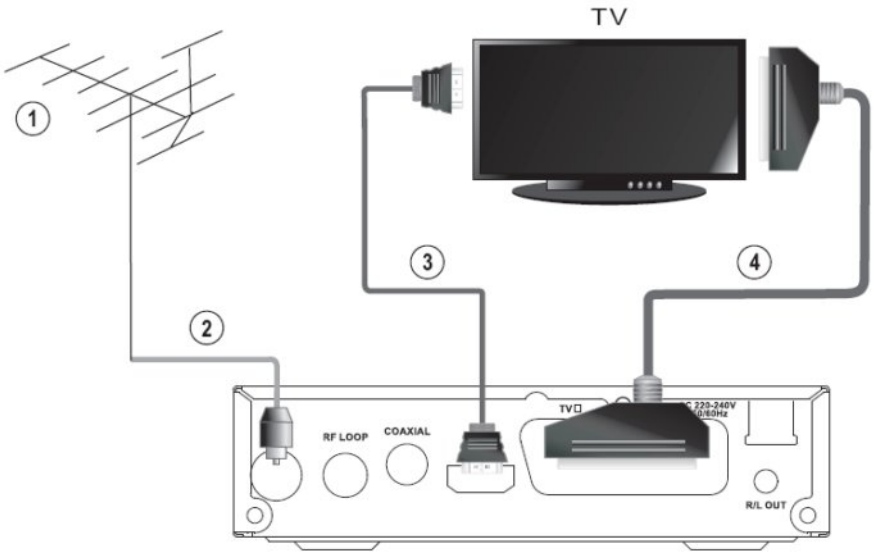

1. Antenna
2. RF cable
3. Scart cable
4. HDMI cable

4.3 Connecting a HiFi System

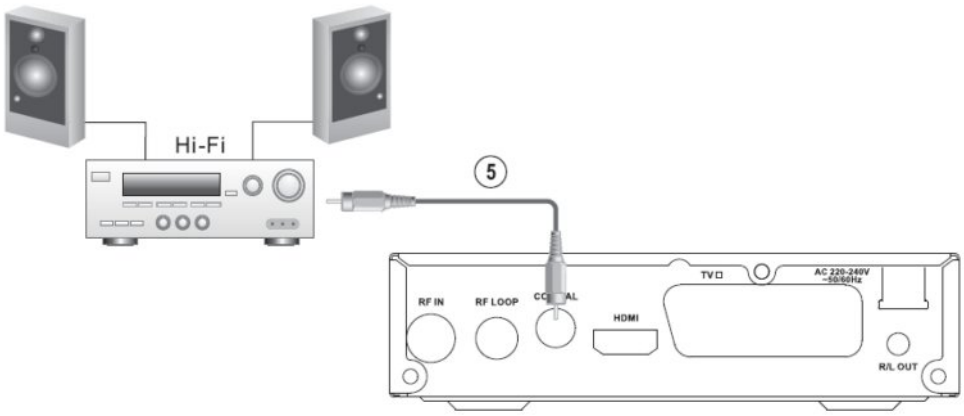

5. Coaxial cable

Korinthou 11, 14451 Metamorfosi, Tel: 210-8098700, Fax: 210-6122512
Site: www.crypto.gr, Email: crypto@crypto.gr

GETTING STARTED

Welcome Screen

If you use ReDi 215A for the first time, the "Welcome" menu appears.
Press cursor button to setup the Region, Language, Display Mode and Aspect Mode.
Highlight "OK" and press the "OK" button to start channel search.

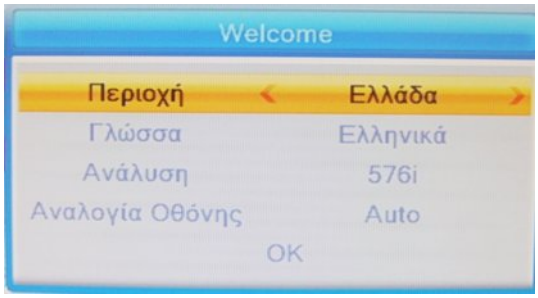

The device will search for all available channels and it will store them. After searching finishes, press OK to start viewing the channels.

Installation

1. Press the "MENU" button to enter main menu.
2. Press "UP"or " DOWN " button to highlight "Installation", press "RIGHT" button to enter to the Installation menu.
3. Press "UP" or "DOWN" cursor button to highlight the desired item and press "OK" button to enter the sub-menu .
4. Press "EXIT" button to exit.

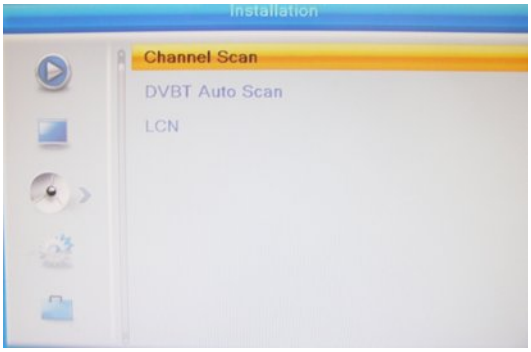

Korinthou 11, 14451 Metamorfosi, Tel: 210-8098700, Fax: 210-6122512
Site: www.crypto.gr, Email: crypto@crypto.gr

Channel scan

Here you can search manually a channel and store it to a specific channel number.

Select the options you like in Scan Mode, Scan Band, Channel No fields and press search to search and store the channel.

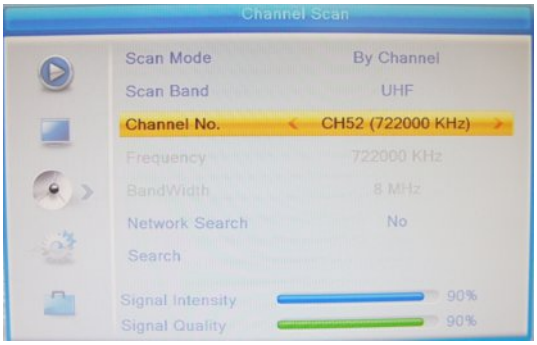

Auto Scan

Here you can search and store channels automatically.

Select the Country that you are.
Select FTA only if you want to search only for free to air channels.
Press Search to start auto channel search.

LCN

If LCN(Logical Channel Number) Select function is activated, you can't change the original number of TV channels by scanning .
You can activate/deactivate the LCN function by setting the "LCN Mode" to on/off.

Korinthou 11, 14451 Metamorfosi, Tel: 210-8098700, Fax: 210-6122512
Site: www.crypto.gr, Email: crypto@crypto.gr

OPERATION

Changing Channels

There are three ways of channel selection - stepping through the channel list, selection by number and from the on-screen channel list.

1. Stepping through the channel list:

To move through the channel list, press the upward arrow or downward arrow key on the remote control.

2. Selected by number:

Enter the channel number directly by pressing numeric buttons, and press the "OK" button to select desired channel.

3. Selected by on-screen channels list:

You can also select the required channel directly from on-screen channel list. This is displayed using the device main menu. See "Edit Channel" in this manual for operation details.

Accessing the Electronic Program Guide (EPG)

Accessing the EPG of all channels:

1 Press "EPG" button to enter EPG menu .
2. Press cursor button to switch between channel list, events schedule of the selected channel and now/next events.
3. Press "Green" button to Timer the events.
4. Press "Red" button to display " Time Bar" menu.

TIMESHIFT/ RECORD

Plugging an external Mass Storage Device on the USB port gives you access to Time Shift/Record a broadcast programme.

- Pause a broadcast programme and continue watching it later (Time Shift)
- Record a broadcast programme.
- When the space available on the Mass Storage Device runs out, recording operation of
broadcast will stop.

NOTE: Please use USB 2.0 disk when recording or timeshift. For timeshift and recording feature, you need take bigger size USB pen driver or HDD (>2GB) for recording.

Korinthou 11, 14451 Metamorfosi, Tel: 210-8098700, Fax: 210-6122512
Site: www.crypto.gr, Email: crypto@crypto.gr

Time shift

The digital receiver ReDi 215A gives you the ability to record and watch one program interfacing with the viewing time. All you have to do is to connect an external hard drive or a USB stick in the usb port of the device.
With this function you can:
Pause the program and continue to see if another time.

NOTE: For proper operation of TIME SHIFT it is recommend using a storage device that supports USB 2.0 and has high speed read /write. Also if it is possible it is recommended to use a USB stick or HDD with high storage space. The product can support up to 2TB disks

The TIME SHIFT is a feature where you can simultaneously track, pause or to go back and forth when you are watching a program. For example, while watching your favorite show someone rings the door bell. No problem. Just activate the function bt pressing “Pause” button and the press “Pause” again to freeze the image. The device then start to record the program and when you return you can resume viewing from where you left.

• **Enable TIME SHIFT**

NOTE: from default Timeshift is OFF to save space on your storage device.
You must enable it fisrt. Please check paragraph 8.10

- To use TIME SHIFT press <PAUSE> and a bar with the time when the recording is started (right) will appear. From this moment and forth the channel program will be recorded.

Each time you wish to pause or rewind the program a new bar will appear. Notice that now the bar has 2 times. The right is the normal time showing the on going time from the beginning when started Time Shift and the left is the play backed time according to the time you choose to watch of the recorded program.

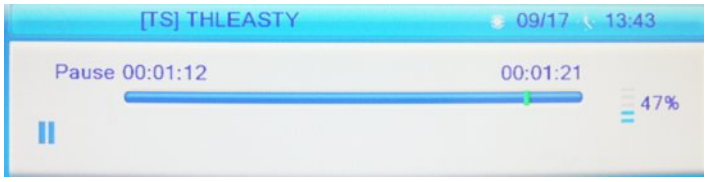

During TIME SHIFT, it is possible to do the following.
- Press "PAUSE" to pause the program and <PLAY> to continue watching later.
- Press "STEP FORWARD" or "FORWARD" to fast forward the recorded program at specified time steps according to “Jump” settings(30 Mon - 30

Korinthou 11, 14451 Metamorfosi, Tel: 210-8098700, Fax: 210-6122512
Site: www.crypto.gr, Email: crypto@crypto.gr

minutes) or at 2χ, 4x, speed etc respectively.
- Press "STEP BACKWARD" or "BACKWARD" to quickly rewind the recording at specified time steps according to “Jump” settings (30 Mon - 30 minutes) or at 2χ, 4X, speed etc, respectively.
This choices affect only the recorded program, and not the function of TIME SHIFT.
To return to the normal playing time press the "STOP" and then the <EXIT>. The TIME SHIFT will continue to record but you will watch the normal time of the program
• **Stop TIME SHIFT**

The TIME SHIFT is switch off when you change the channel or if you enter the main menu

NOTE:
• The TIME SHIFT is disabled when you activate it for a specific channel and you have scheduled a recording (PVR) to another channel. When that recording starts the device will take you to that channel automatically and it will deactivate Time Shift to the other
• The TIME SHIFT can be activated while recording a program, but only for that channel you are recording.

Personal Video Recording (PVR)

- Instant Recording

With this feature, with a touch of a button you can write a program you are watching.
- Press <RECORD> button on your remote to immediately start recording the program you are watching
- Pressing the button again <RECORD>, you can adjust the duration of the recording.
- Press <STOP> button to stop recording. A window will appear.
- Select YES to stop recording. Select NO to resume recording.

- Scheduled Recording

Apart from the operation of direct recording, the device can be scheduled to write a program in the future.
-Press and the <Menu> button and select <System Setup>, <Timer Settings> This menu lets you set the timer for a recording.

Time Mode: Off/Once/Daily/Weekly
Time service: Record/Channel

Korinthou 11, 14451 Metamorfosi, Tel: 210-8098700, Fax: 210-6122512
Site: www.crypto.gr, Email: crypto@crypto.gr

Wakeup Channel: Set the channel you want to record.
Wakeup Date: Press OK and then the numbers to enter the date of recording.
Wakeup Time: Press OK and then the numbers to enter time you want the device to start writing.
Duration: Press OK and then the numbers to enter the duration of the recording

Note :

- When you write a program in a particular channel you can watch another of the same group of four digital channels, at the same time you make the record.
- When you have programmed a recording for a channel and you are watching another with the time shift activated when the recording will start the device automatically deactivate Time Shift and takes you to the channel that is programmed to be recorded.
- During the time that a recording takes place the Time Shift function can be activated in parallel with the recording only for that specific channel and not for anyone else.

Korinthou 11, 14451 Metamorfosi, Tel: 210-8098700, Fax: 210-6122512
Site: www.crypto.gr, Email: crypto@crypto.gr